

Enter/Exit code.

Enter/Exit Configuration Mode



Scan
First
&
Fourth



PS/2 Keyboard.

Scan the above for PS/2 computer. (Includes IBM PC and compatible models 30, 70, 8556).

Scan
Second



Do Not Transmit FOH Break Code.

The scanner will not transmit the FOH in the break-code sequence.

Scan
Third

Only Scan Bar Code Below to
Start Over.

NEED TO START OVER?

Scan the *Recall Default* bar code. This will erase all previous :
to the scanner's default communications protocol.

Keyboard Wedge interface scanners will load keyboard wedge

All other scanners load RS-232 defaults.

Note: Metrologic manufactures custom OEM scanners, which
defaults. Page 95 will explain how this affects "Metrolo

Recall Defaults

