

Enter/Exit
Configuration Mode



6x8 Scale
Best Print
Quality

Recall Defaults



Enter/Exit
Configuration Mode



Enter/Exit
Configuration Mode



Enable HH Laser Emulation



Enter/Exit
Configuration Mode



Enter/Exit
Configuration Mode



~Minimum Symbol Length. Omnidirectional default is 4. Single-line default is 3. Combine this code with the proper Code Bytes, to specify the minimum number of characters in the UPC/EAN bar codes. Refer to Multi-Code Method on page 1.



Code Byte 0.



Code Byte 0.



Code Byte 1.

Enter/Exit
Configuration Mode

